

Instructions for 102 & 153 single stud patterns on a 146"/371cm two-ply track with 2.86 pitch using the 286T Template

Use these instructions to create:

102 stud pattern on a 146"/371 cm tracks.

153 stud pattern on a 146"/371 cm tracks.

Refer to the picture on Woody's 286T. Note, the 84 and 126 single stud pattern have a specific sequence of letters.


Note: **A PITCH is the space between each lug row.**

This 286T template will accommodate 15" & 16" / 38cm & 41cm wide tracks. At the ends of each lug slot a portion of the template is outlined in a black dotted line.

- To fit a 15"/38cm wide track leave the dotted outlined area intact. If the black dotted outlined area has been removed, the modified template should not be used on 15" wide track widths.
- To fit a 16"/41cm wide track remove the area inside the dotted lines.


102 Pattern

Use the 84 single, center belt pattern on the 286T-Temp. Repeat this pattern 8.5 times.

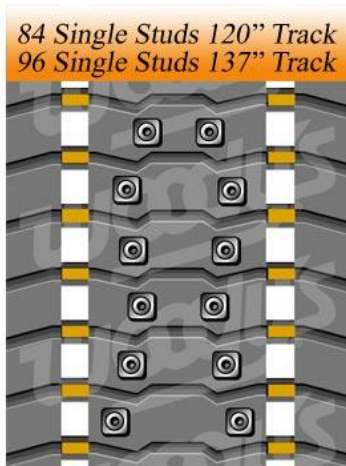

153 Pattern

Use the 126 single, center belt pattern on the 286T-Temp. Repeat this pattern 8.5 times.

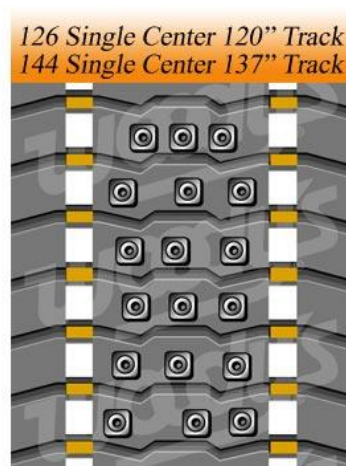

Important-- If installing Angled Digger® support plates, the hole(s) for drilling will be offset from the original pattern holes marked. Center the Angled Digger® support plate between the lugs over the original pattern marked. Create a new offset mark for drilling in the center of the hole of the Angled Digger® support plate. Refer to the Angled Digger® Support Plate Installation instructions included in the package.

WARNING Review the snowmobile and track manufacturer's studding recommendations in your owner's manual. You may void your warranty if their recommendations are not followed. You must read and understand these instructions before drilling holes in your track, if you have any questions contact Woody's through the methods listed below.